

Build Book For Yanfeng

Customer Name:	Yanfeng Automotive Trim Systems Co., Ltd
Release Date:	2023-10-10
Version:	4.7
Project Manager:	Cao Peng/ Frida Tang





Content

1.	Purpose	3
2.	Device Level Configuration (Ricoh Local Engineer)	3
3.	Enable remote operation (Ricoh Local Engineer)	4
4.	Preparing the MFP for PCC Installation (Ricoh Local Engineer)	5
5.	Push EQ Software (Ricoh China Engineer):	10
6.	Testing (Yanfeng Local IT)	10
7.	Lock EQ interface (Ricoh Local Engineer)	11

Name: MFD Build Book for YFAI Page 2 of 13	Version: 1.0
--	--------------





1. Purpose

These instructions are the final configuration settings required and apply to the following models:-

- MP 2555SP/3555SP
- MP 5055SP
- IMC 3500/IMC4500/IMC 6000
- MP C6000
- •

2. Device Level Configuration (Ricoh Local Engineer)

- 1) Device printer driver name rule as followings
 - > The printing is by swiping-card: <follow-you-sitename>
 - > Direct printing: The driver name is same as hostname.
- 2) Enable Admin 2 Account :
 - If the device admin account is Adminyf, please ignore the step
 - If the device admin account isn't **Adminyf**, **please add Admin 2**, the step as followings
 - User tools→system settings→administrator tools
 - Administrator Authentication Management Enable administrator authentication
 - Program/Change Administrator
 Set administrator 2 account as follows
 Login name: adminyf
 login password: 20126465Mps
 - Assign the following permissions to administrator 2

User Administrator	: 🗹 Administrator 1 🗹 Administrator 2 🗌 Administrator 3 🗌 Administrator 4
Machine Administrator	: 🗹 Administrator 1 🗹 Administrator 2 🗌 Administrator 3 🗌 Administrator 4
Network Administrator	: 🗹 Administrator 1 🗹 Administrator 2 🗌 Administrator 3 🗌 Administrator 4
File Administrator	: 🗹 Administrator 1 🗹 Administrator 2 🗌 Administrator 3 🗌 Administrator 4





Bisstem Hore Expension Change Language Language Check Status	Address Book Settings	Cogout	1. Login as device administrator, and Select Setting
Settings	E.	? Q Search All	2. Select System Settings.
System Settings	Copier / Document Server Settings Printer Settings	Change Language Language	
Address Book	Conner Settings	Y Maintenance	
Tray/Paper Settings		123 Counter	
Basic Settings When Installing			
2022/09/06 15:33	*		
System Settings	Logged In: Machine Administrator	Back to Settings Menu	3. Select the [Settings for Administrator]
Machine	Cottings for Administrator	Back to Settings Menu	4. Enter [Remote Panel
Date/Time/Timer			Operation].
Sound	Data Management		
Network/Interface		~	
Send (Email/Folder)		~	
Settings for Administrator	Security	>	
Machine/Control Panel	Remote Panel Operation		
	Function Restriction	>	
2022 / 09 / 06 15 : 40	∱		

3. Enable remote operation (Ricoh Local Engineer)



	-					
🔳 Ma	achine Administrator	Logged in: Machine Administrator	Logout	C	5.	Set [Remote
R	emote Panel Operation	Cancel	ОК			Operation/Monitoring] to " Active ".
Dat	Remote Operation/Monitoring	Remote Connection URL : 192.168.199.223/rws/sop/rst Active	•			
Net	Remote Connection Timeout	minute(s)	<3 - 60>	10 V		
Set Mac Info				*		
	2022 / 09 / 06 15 : 40	5 🗥				

**** The followings step is only for EQ solution installation. If this device is Direct Printing, please ignore the step.

4. Preparing the MFP for PCC Installation (Ricoh Local Engineer)

Before you start the PCC installation, complete the following tasks on the MFP

- 1) Confirm that the date and time settings on the MFP are correct. If the date and time settings are incorrect, PCC cannot connect to the Equitrac DCE server.
- 2) Please configure the time zone correctly on the MFP. If the time zone is incorrect, PCC transaction times are reported incorrectly.
- 3) If using an Equitrac card reader, plug it in.
- 4) Ensure that CCS mode is enabled on the MFP.

	S		patible USB device has been	connected.		Enter SP mode on the MFP front panel.
	Copier (Classic)	Printer (Classic)	Scanner (Classic)			
	Quick Print Release	Document Server	Web Browser	Scanner		
	i System Message Incompatible USB devi d.Check the USB devi	1 vice has been connecte ce.	Сору	Print/Scan (Memory Storage Device)		
•• Chec	k Status	4	8 =	<u>©</u> 5	•• ton	



SP mode Sostee Se Sostee Se Printer Se Printer Se Scarner Se Printer Se C Sample Copy Firmware Usdate C Sample Copy C Stop	Press the System Sp button.
Second Status SP Mode (Service) Open ALL COPY Window SP Direct X-XXX-XXX Exit Reset S067 Part Replacement Operation Type COPY SP-5-113-002 0tional Counter Type 1 2 3 S071 Set Bypass Paper Size Display Open ALL COPY SP-5-113-002 0tional Counter Type 1 2 3 S073 Supply Part Replacement Operation Open ALL Copy SP-5-113-002 0tional Counter Type 1 1 2 3 S073 Supply Part Replacement Operation Operational Counter Type 1 1 4 5 6 7 8 9 S075 USB Keyboard Line Line Line 2:Expansion Device 2 V V V V V V 0 ## C Sample Copy Sample Copy Start S102 Autobactect Fase Conter Type Group CANCEL M MextPase Start S102 Autobactect Fase Conter Type Group CANCEL MextPase Start Start <th> a) Select SP-5XXX, and set the following: > 5113-001 to '0'. (this is the default setting and should not be altered) > 5113-002 (External Optional Counter Type) to '1' b) Exit SP Mode </th>	 a) Select SP-5XXX, and set the following: > 5113-001 to '0'. (this is the default setting and should not be altered) > 5113-002 (External Optional Counter Type) to '1' b) Exit SP Mode
Concer Status Supple Image: Supple System Settings Printer Features Image: Supple Printer Features Image: Supple System Settings Printer Features Image: Supple Image: Supple System Settings Image: Supple	 a) Press the [User Tools/Counter] button on the MFP. The [User Tools /Counter / Inquiry] screen opens. b) Select [System Settings]



		5 5
i System Settings	Exit	Select the [Administrator Tools] button to proceed to
General Tray Paper Timer Inter Features Settings Settings Set	face File Administrator Transfer Tools 1	next screen.
Program / Change / Delete User Text	Screen Color Setting Marine Blue Type	
Panel Key Sound Medium	Output: Copier Internal Tray 1	
Warm-up Beeper On	Output: Document Server Internal Tray 1	
Copy Count Display Up		
Function Priority JavaTM/X	Output: Printer Internal Tray 1	
Print Priority Display Mode	Key Repeat Normal	
Function Reset Timer 3 second(s)	System Status/Job List Display Time 1 5 second(s)	
<u>ٺ</u>	System Status Job List Printer NOV 6,2013 Printing: 1 min. 10:094M	
🔯 System Settings	Exit	Press the [Next] button to
General Tray Paper Timer Inter Features Settings Settings	face File Administrator Transfer Tools	proceed to the next screen.
Address Book Management]	
Address Book: Program / Change / Delete Group	Display / Print Counter	
Address Book: Change Order	Display / Clear / Print Counter per User	
Print Address Book: Destination List	Machine action when limit is reached Allow continue use	
Address Book: Edit Title]	
Address Book: Switch Title Title 1		
Back Up / Restore Address Book		
	1∕4 ▲ Previous ▼ Next	
	System Status Job List Printer NOV 6,2013 Printing: 1 min. 10:09AM	
🔯 System Settings	Exit	Press the [Enhanced
General Tray Paper Timer Inter Features Settings Settings	face File Administrator Transfer Tools	Management] button.
User Authentication Management	Extended Security	
Enhanced Authentication Management	Auto Delete File in Document Server 3 day(s)	
Administrator Authentication Management	Delete All Files in Document Server	
Program / Ghange Administrator		
Key Counter Management		
External Charge Unit Management		
Enhanced External Charge Unit Management	1	
	2∕4 ▲ Previous ▼ Next	
É	System Status Job List Printer NOV 6,2013	



🔞 System S	ettings		Exit	1) Enable ONLY the Copier, Scanner, Fax and Document
Enhanced External Char	ge Unit Management	Cancel	ОК	Server options.
Select function(s) to	e managed by the Enhanced External Charge Unit, the	n press [OK].	2	options! 2) Press the IOKI button, and then
►Copier	Full Color Black & White	Single Color		exit User Tools. 3) Restart MFP to apply the
	1			changes.
▶Printer	Color Black & White			
► Other Functions	JavaTM/X	Scanner		
	System Status	Job List Printer	NOV 6,2013	

• for IM C2000 ~ IM C6000

- 1) Confirm the Firmware Version on the MFP is V4.60.1 or above. If the Firmware Version is below V4.60.1, please update the MFP's Firmware.
- 2) If using an Equitrac card reader, plug it to panel's USB slot.

_	١.
5	۱
J	1

	? Login (
Copy Copy Scanner		Enter SP mode on the MFP front panel.
Quick Print Release	Connection	
Document Server	Application Site	
	9/210:54 · · · · · · · · · · · · · · · · · · ·	
SP mode	A.60.1 Exit Reset 1 2 3 4 5 6 7 8 9	Confirm the Firmware Version on the MFP is V4.60.1 or above. If the Firmware Version is
Printer Sp Scanner Sp	/* 0 # Enter	update the MFP's Firmware.
Finware Update	Clear Clear	
Recall/Program/Change Program		



SP Mode (Service) Open All C 5085 Keybord Setting 5101 Copy Auto Clear Setting 5102 AutoDetect 5113 Optional Counter Type 1 Default Optional Counter Type 2 External Optional Counter Type 5114 Optional Counter I/F 5118 5120 Mode Clear Opt. Counter 5120 5120 Mode Clear Opt. Counter 5120 5120 Set F-size Document 5126 5126 Set F-size Document Recall/Program/Change Program Check Status 2022/09/1	2022/ 9/ 6 15:53 Iose Attl COPY Window SP Direct X-XXX-X Group COPY : SP-5-113-002 Octional Counter Type External Optional Counter Type Page #0:None er Type I:Expansion Device 1 Line 1:Expansion Device 2 Line S:Expansion Device 3 Group CANCEL Group CANCEL OK 1*PrevPage	XX Exit Reset 1 2 3 1/1 4 5 6 7 8 9 /* 0 # Enter C _{(lear} Sample Copy Start	 Select SP-5XXX, and set the following: > 5113-001 to '0'. (this is the default setting and should not be altered) > 5113-002 (External Optional Counter Type) to '1' 2. Exit SP Mode
Elisistem Home Settings System Settings Address Book Control Tray/Paper Settings Elisis Settings When Installing 2022/09/	Copier / Document Server Settings Printer Settings Copier / Document Printer Settings	 Counter Login Search All Change Language Language Inquiry Maintenance Counter 	Login as device administrator and enter System Settings.
15:41 Machine Administrator Sound Network/Interface Send (Email/Folder) Settings for Administrator Authentication/Charge External Charge Unit Management Machine/Control Panel Information 2002/09/ 21:465	Logged in: Machine Administrator Search All External Charge Unit Manage Key Counter Management External Charge Unit Management Enhanced External Charge Unit Management	Percent Content Conten	 Select the [Settings for Administrator] - [Authentication/Char ge] - [External Charge Unit Management]. Enter [Enhanced External Charge Unit Management].



	Aachine Administrator	Logged in: Machine Administrator	Cogout	1	Enable ONLY the
	Enhanced External Charge Ur	nit Management Cancel	ОК		and Document Server
Sou	Conjor	Black & White			options.
Sen	Copier	Single Color	Other 2 Selected		***Do not enable Printer!
Set	Printer	Black & White		2	2. Press the [OK] button,
L A	Time	Color			and then exit system
L E N	Document Server	On	T	3	3. Restart MFP to apply
Mac Info	Scanner	On	▼		the changes.
	2022 / 09 / 06	5 🗥			
	Nachine Administrator	Logged in: Machine Administrator	? Logout		
	Aachine Administrator Copier	Logged in: Machine Administrator Cancel	CK		
Sou	Machine Administrator	Logged in: Machine Administrator Cancel	Cogout OK		
Sou Net	Machine Administrator Copier ✓ Black & White ✓ Two-color	Logged in: Machine Administrator Cancel ✓ Single Color ✓ Full Color	Cogout Cogout		
Sou Net Sen	Machine Administrator Copier	Logged in: Machine Administrator Cancel ✓ Single Color ✓ Full Color	CK OK		
Sou Net Sen L A	Machine Administrator Copier	Logged in: Machine Administrator Cancel ✓ Single Color ✓ Full Color	CK OK		
Sou Net Sen Set	Machine Administrator Copier	Logged in: Machine Administrator Cancel ✓ Single Color ✓ Full Color	CK OK		
Sou Net Ser Set A L A Mat Info	Machine Administrator Copier	Logged in: Machine Administrator Cancel	CK OK		

5. Push EQ Software (Ricoh China Engineer):

China Software Engineer will be responsible to push the Equitrac DRE, DCE and PCC.

6. Testing (Yanfeng Local IT) Yanfeng local IT test the all function operate smoothly.

Name: MFD Build Book for YFAI	Page 10 of 13	Version: 1.0
-------------------------------	-----------------------------	--------------





7. Lock EQ interface (Ricoh Local Engineer)

Service	E, Deny admin.'s operation, tap here	Cogout C	
Screen Features Settings			1. Enter Panel SP mode.
Device			2. Select [Screen
≡ Storage & USB			Device Settings].
🖻 Apps			
Personal			
Language & input			
System			
© Screen Device Settings Information			
Screen Device Settings			
Check Status 2022/09/06	☆ ☆	💿 Stop	
Service	E,	, ? Logout 🤇	
← Screen Device Settings			Select [Home Key
lice of External Interface			Settings].
Server Settinge			
Change the Number of Allocated Evention Ke			
Change the Number of Allocated Function Ke	ys		
Home Key Settings			
Application Settings			
Recovery by Authentication Priority			
Backup / Restore Settings			
Check Status $\frac{2022/09/06}{15.21}$		Stop	
E System Home		Cogout (
← Home Key Settings			Select [Home Key
-			Settings] and Press
Home Key Settings			[Home Key
Home Key Assignment Mode			Application, select the
Home Key Application			when a user presses the
Show default Home for unauthenticated user			Home Kev.
System Home Key Icon Settings			
Check Status 2022/09/06		Stop	



🔝 🗄 üsten inne				Logout (
(🔯 Home Key Application					
Launcher					
11					
Check Status	\$			Stop	
Service		不能将文件保存在捕获服务器中。		注销	
Home Key Settings					Press the [System Home
Home Key Settings				7	Key Icon Setting], select
Home key seeings					Rey Disable .
Home Key Assignmen Sy	/stem Home Ke	y Icon Settings			
Home Key Application Ke	y Enable/Icon Visib	le			
Ke Show default Home f	y Disable			2	
System Home Key Icon Se	ettings	取消			
检查状态	€		Ø	停止	
Service			?	Logout (1. Select [Screen
← Screen Device Settings					Device always -
					connection Setting].
Application Settings					2. Set to "Active"
Recovery by Authentication	n Priority				Evit Denel SD Settings
Backup / Restore Settings					and report the MFP
Display Apps List Setting					
Screen device always-con	nection Setting				
Intelligent Voice Control					
Panel Self Check					
	09/06			<u></u>	
Check Status 2022/ 15:51				Stop	



	intagine. (
Service	C Logout
← Screen Device Settings	
Application Settings	
Recovery by Authent Screen device always-connection Setting	
Backup / Restore Se O Active	
Display Apps List Se	
Screen device always	
Intelligent Voice Control	
Panel Self Check	
Check Status 15:50 S	💿 Stop

Name: MFD Build Book for YFAI	Page 13 of 13	Version: 1.0